


Assembly manual


for Precision Line frameless systems

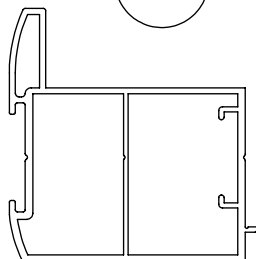


1 2 pcs




2 1 pc

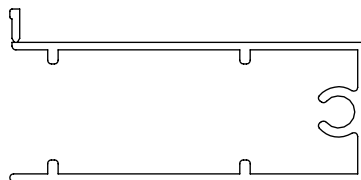

3 1 pc

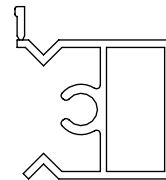

4 1 pc

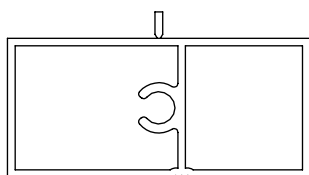

5 2 pcs



6 2 pcs




7 2 pcs




8 6 pcs




9 2 pcs

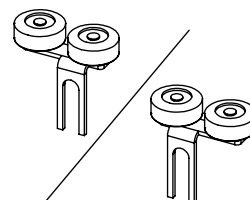


10 2 pcs

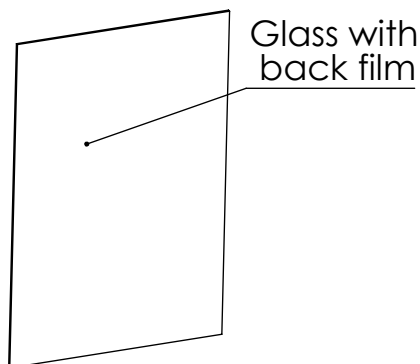

11 2 pcs

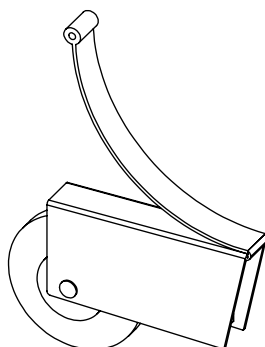


12 1 pc




Assembly manual

for Precision Line frameless systems

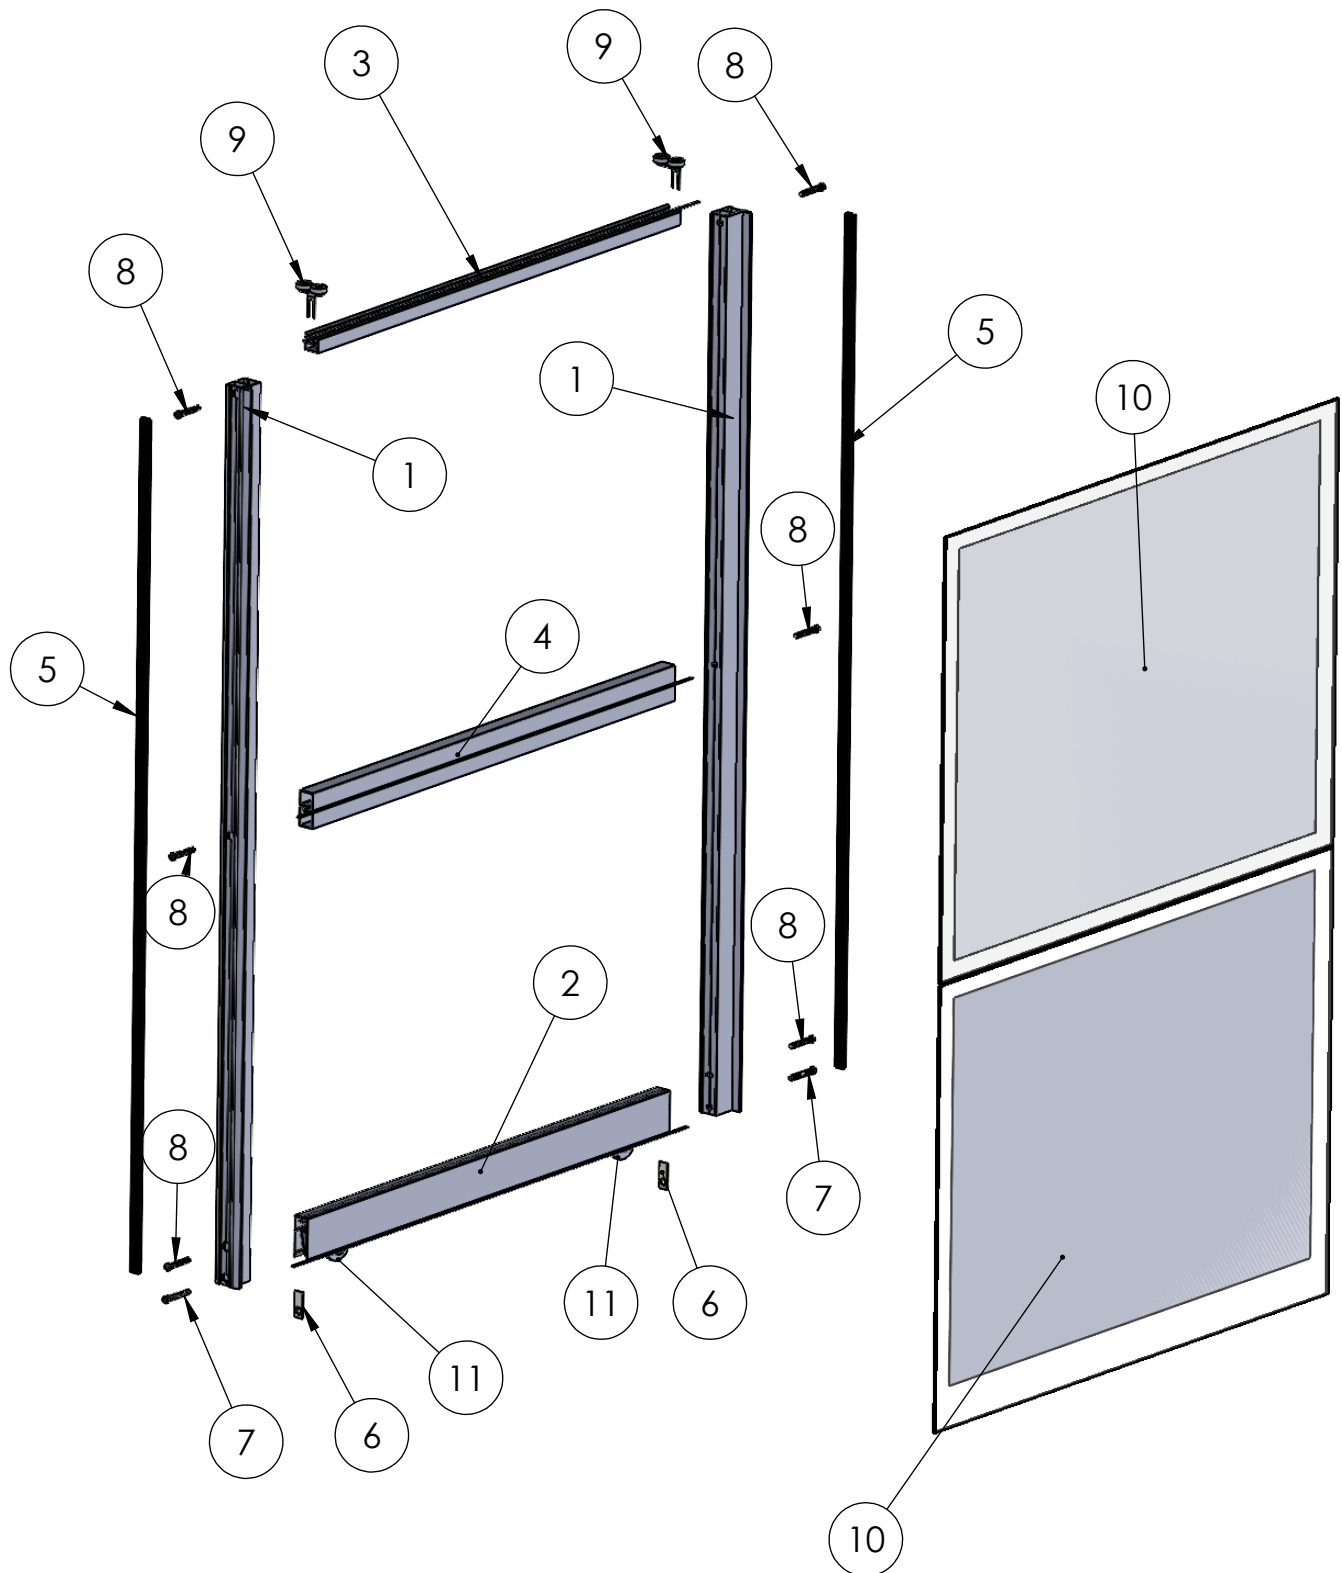


Assembly manual


for Precision Line frameless systems

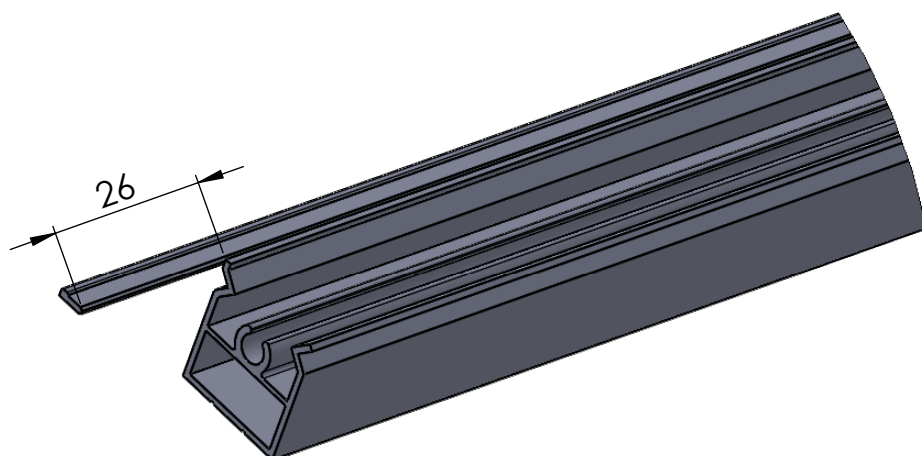


③ 1 pc

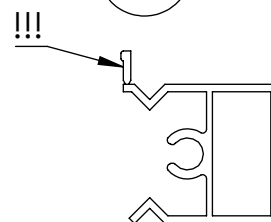


Top rail

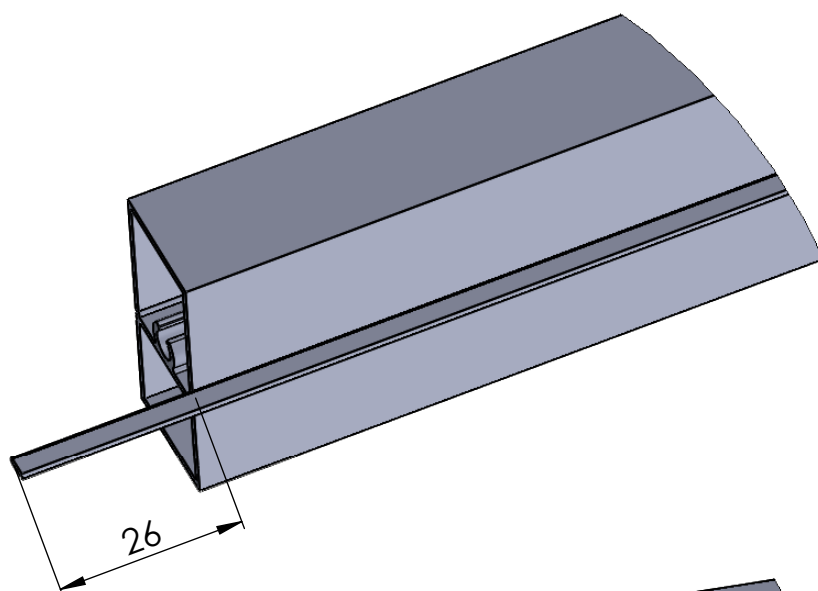


④ 1 pc

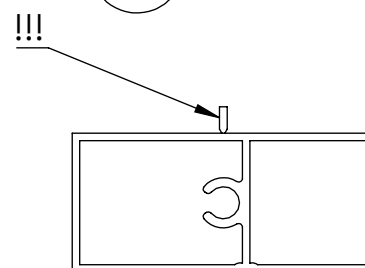

Splitter

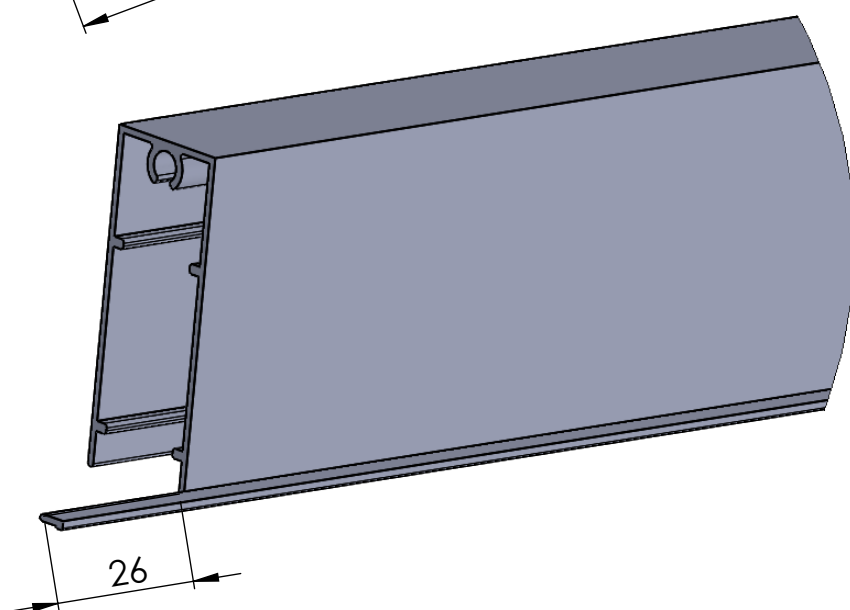

② 1 pc

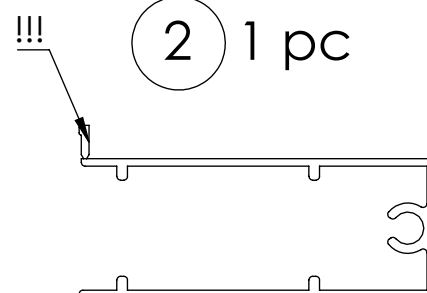

Bottom rail




Keep 26 mm from both sides !!!

Assembly manual

for Precision Line frameless systems



safety film back

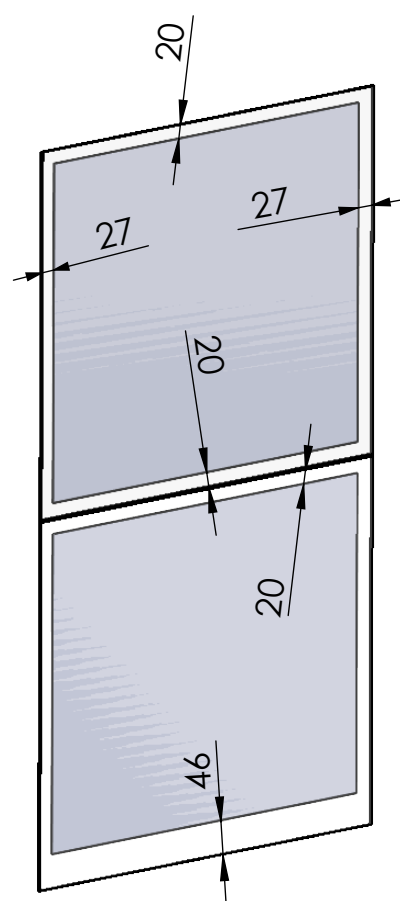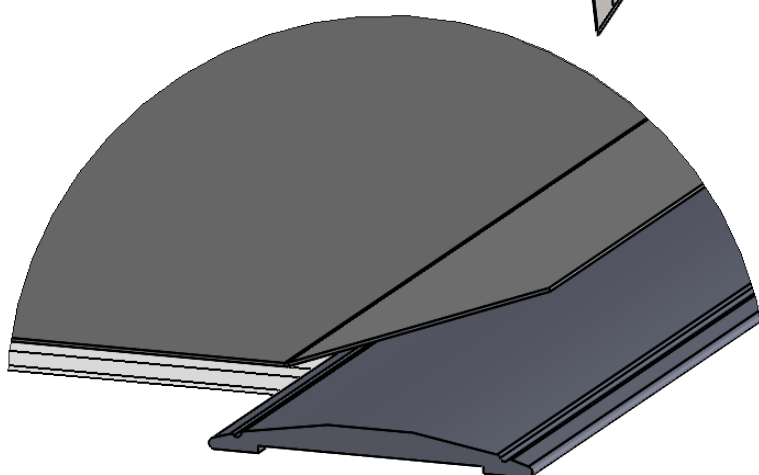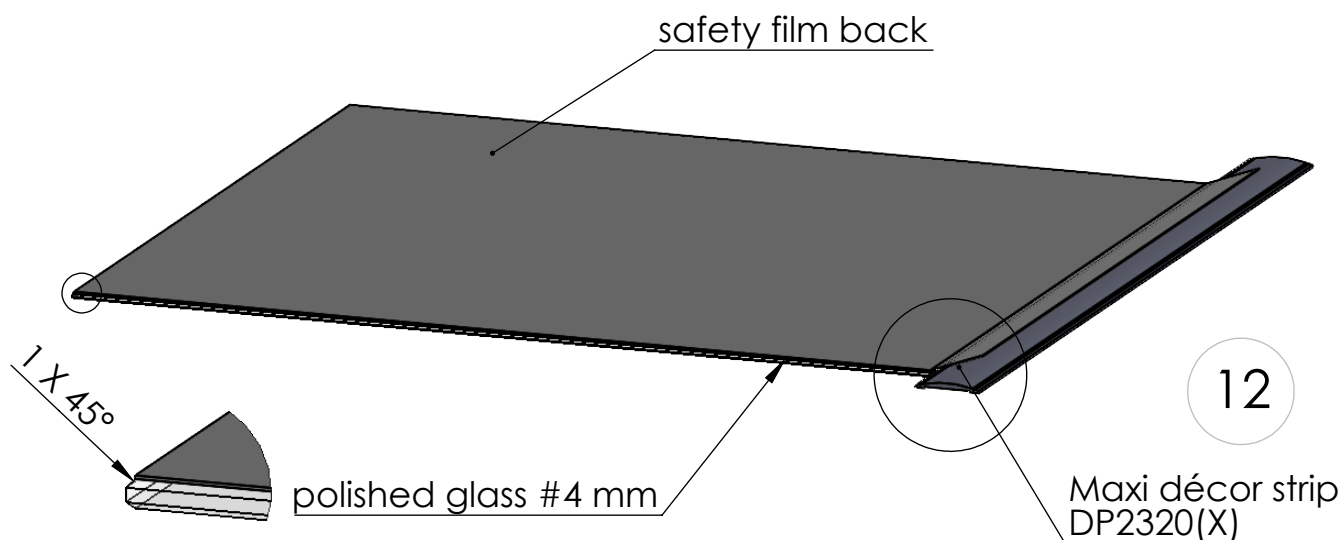





1. Peel off safety back film,
2. Put DP2320(X) Profile
3. Cut off surplus of safety back film by knife
4. Stick safety back film
5. Stick to clean glass double sided tape and stick glass to assembled frame



for Precision Line frameless systems



ALVE
components

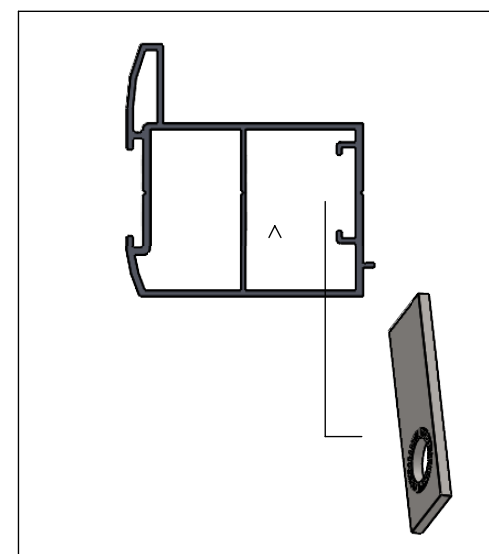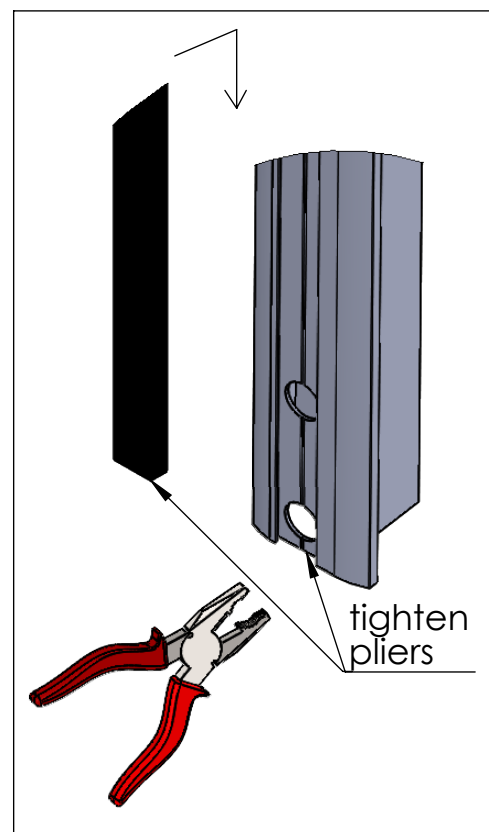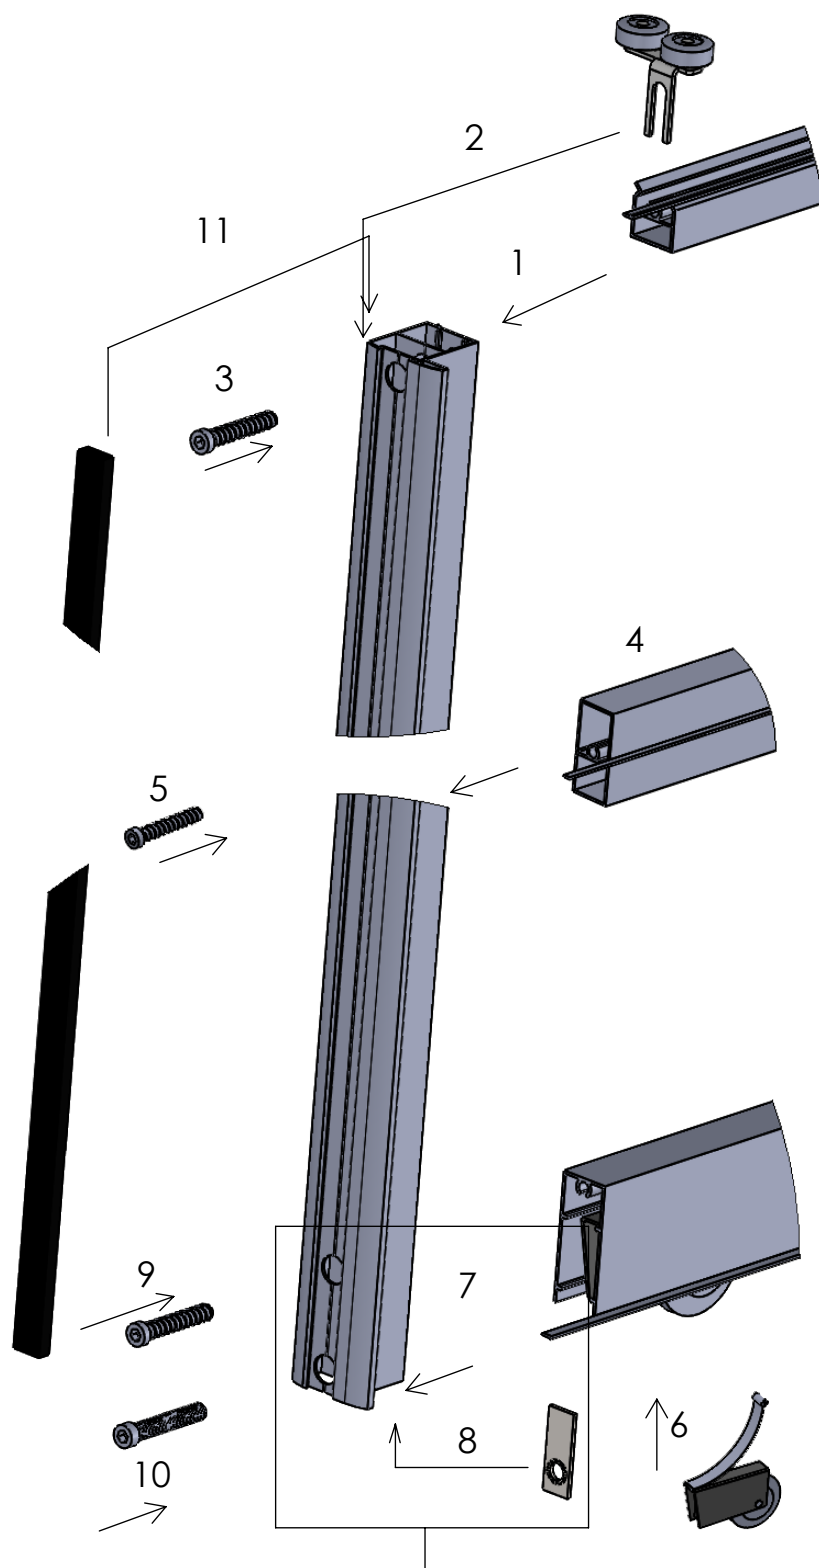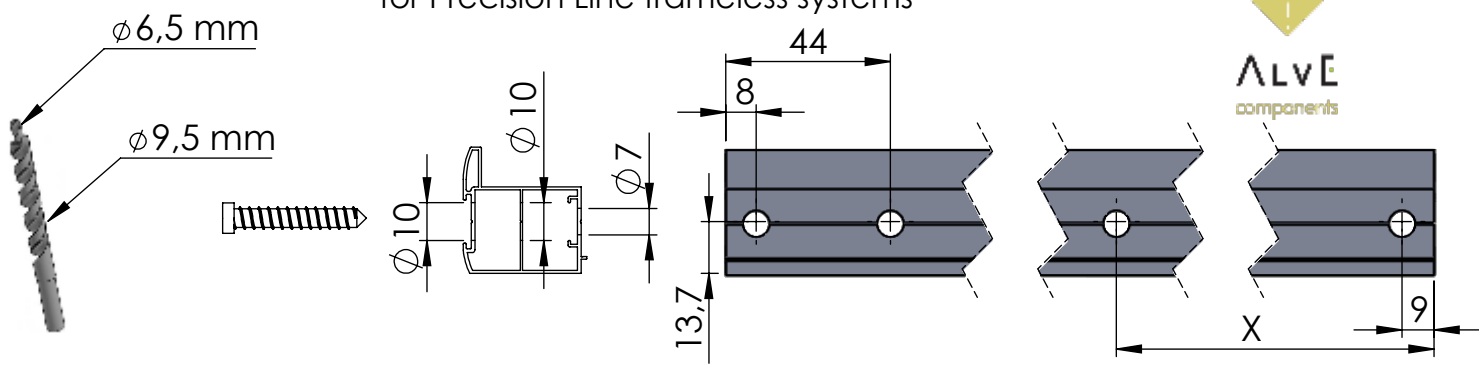


Door leaf installation


for Precision Line frameless systems




13 1 pc

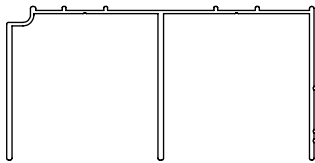





14 1 pc



15 1 pc



16 2 pcs

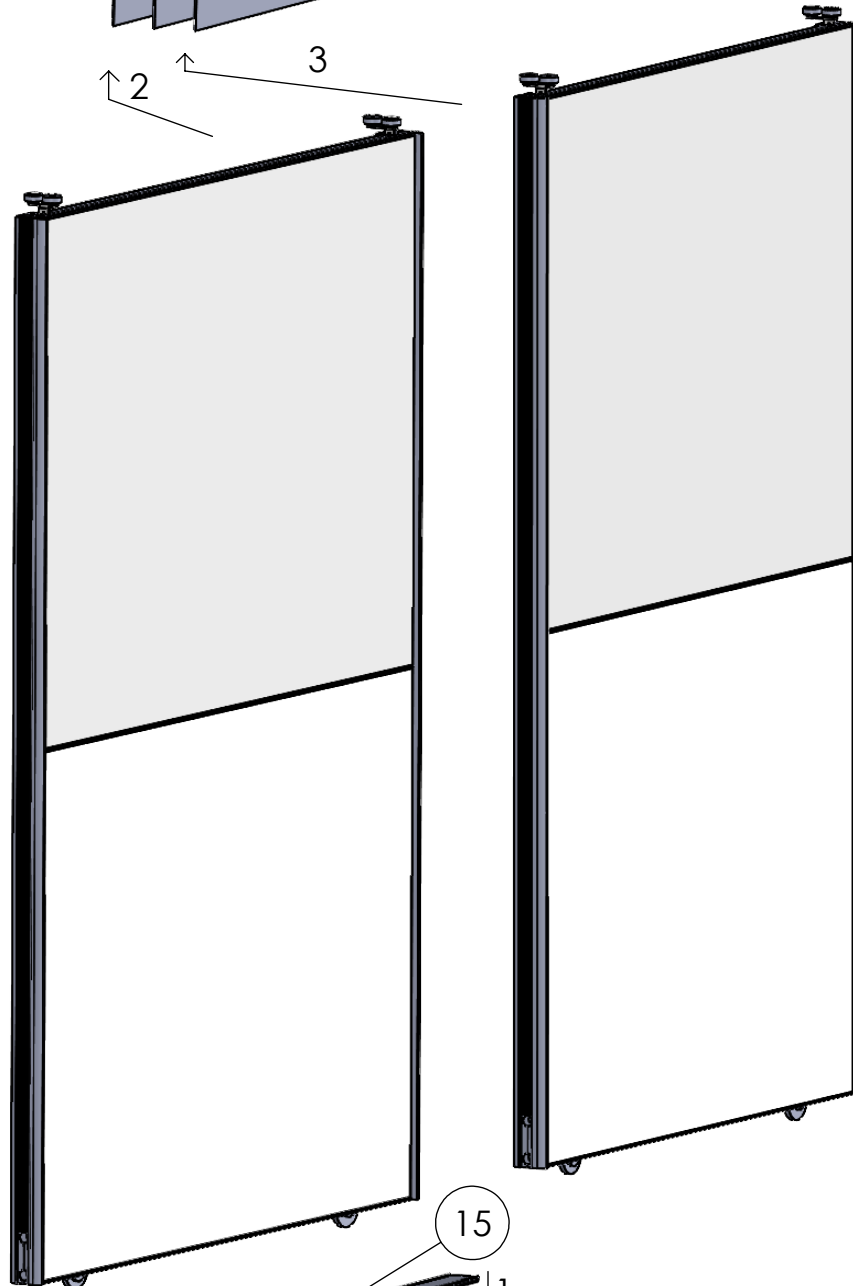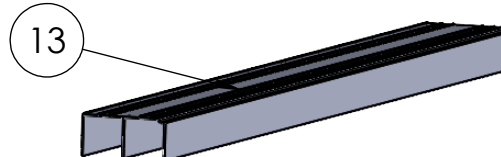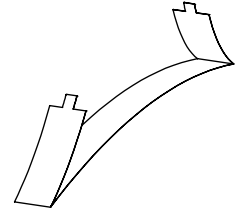

15





14




Door leaf installation

for Precision Line frameless systems

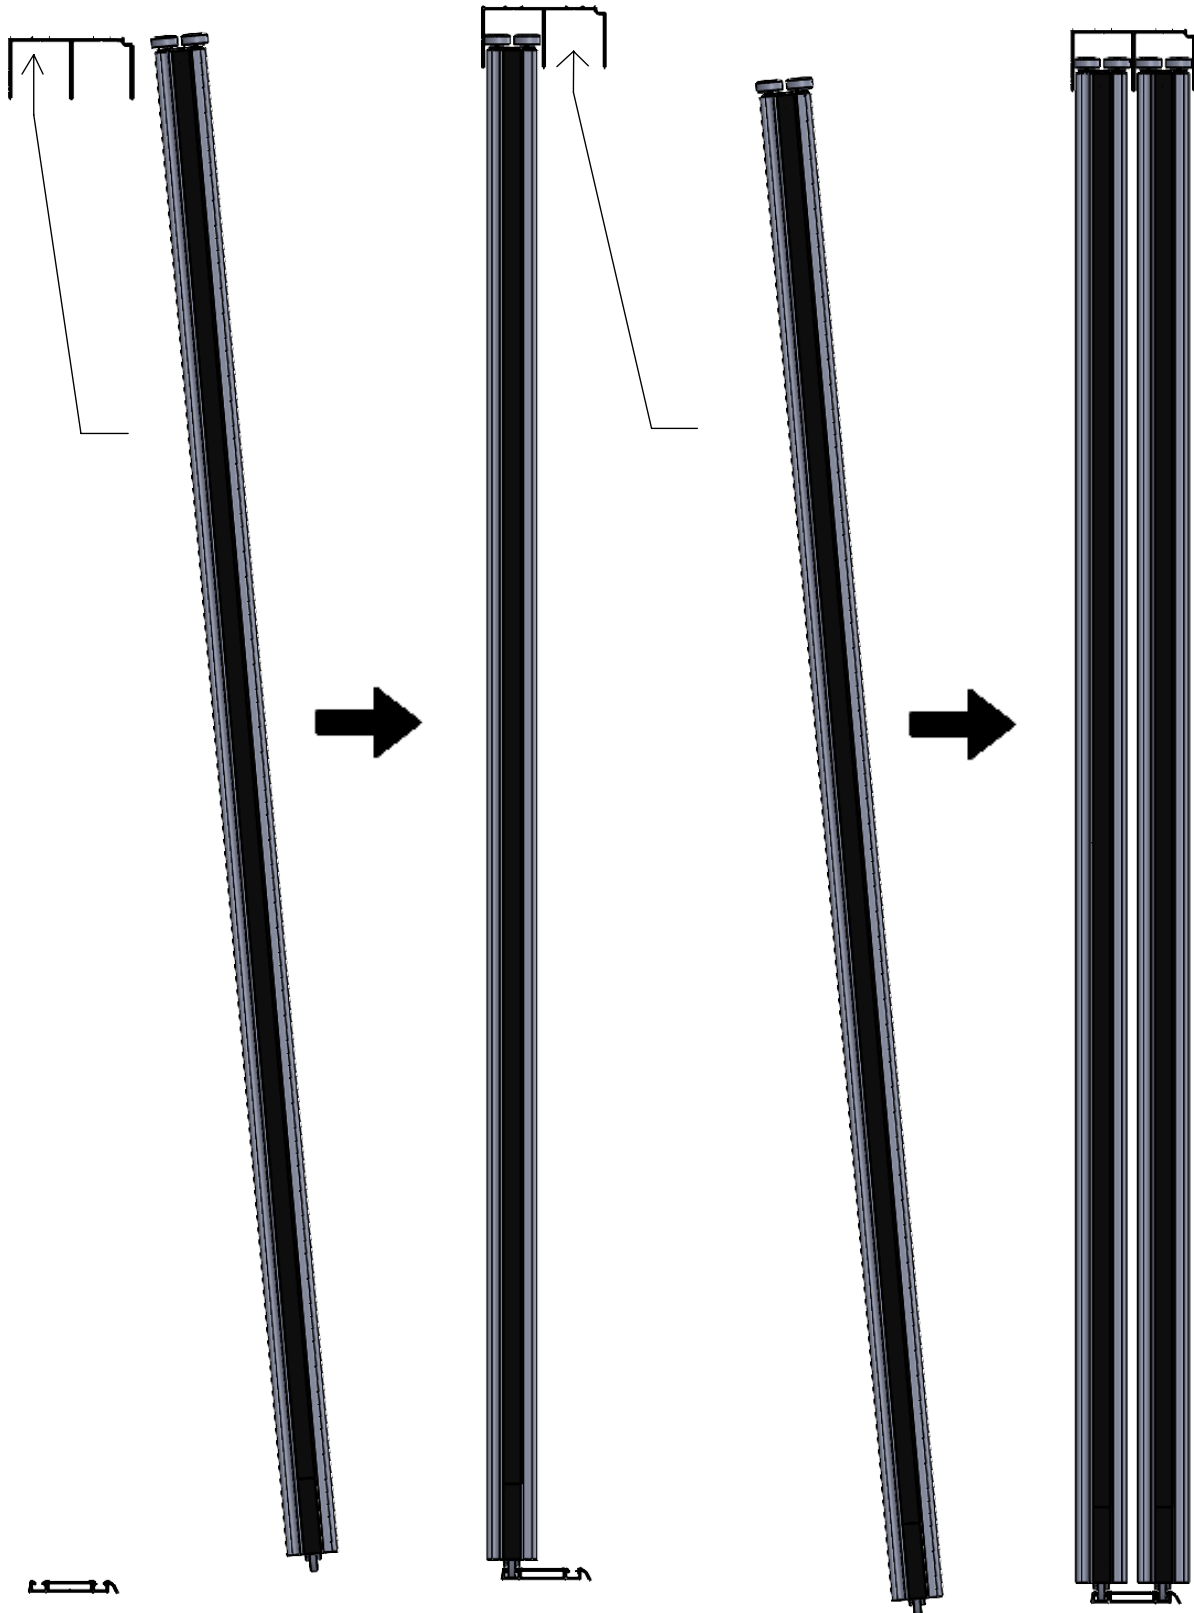

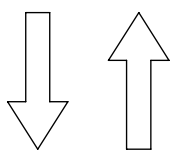

Level the door




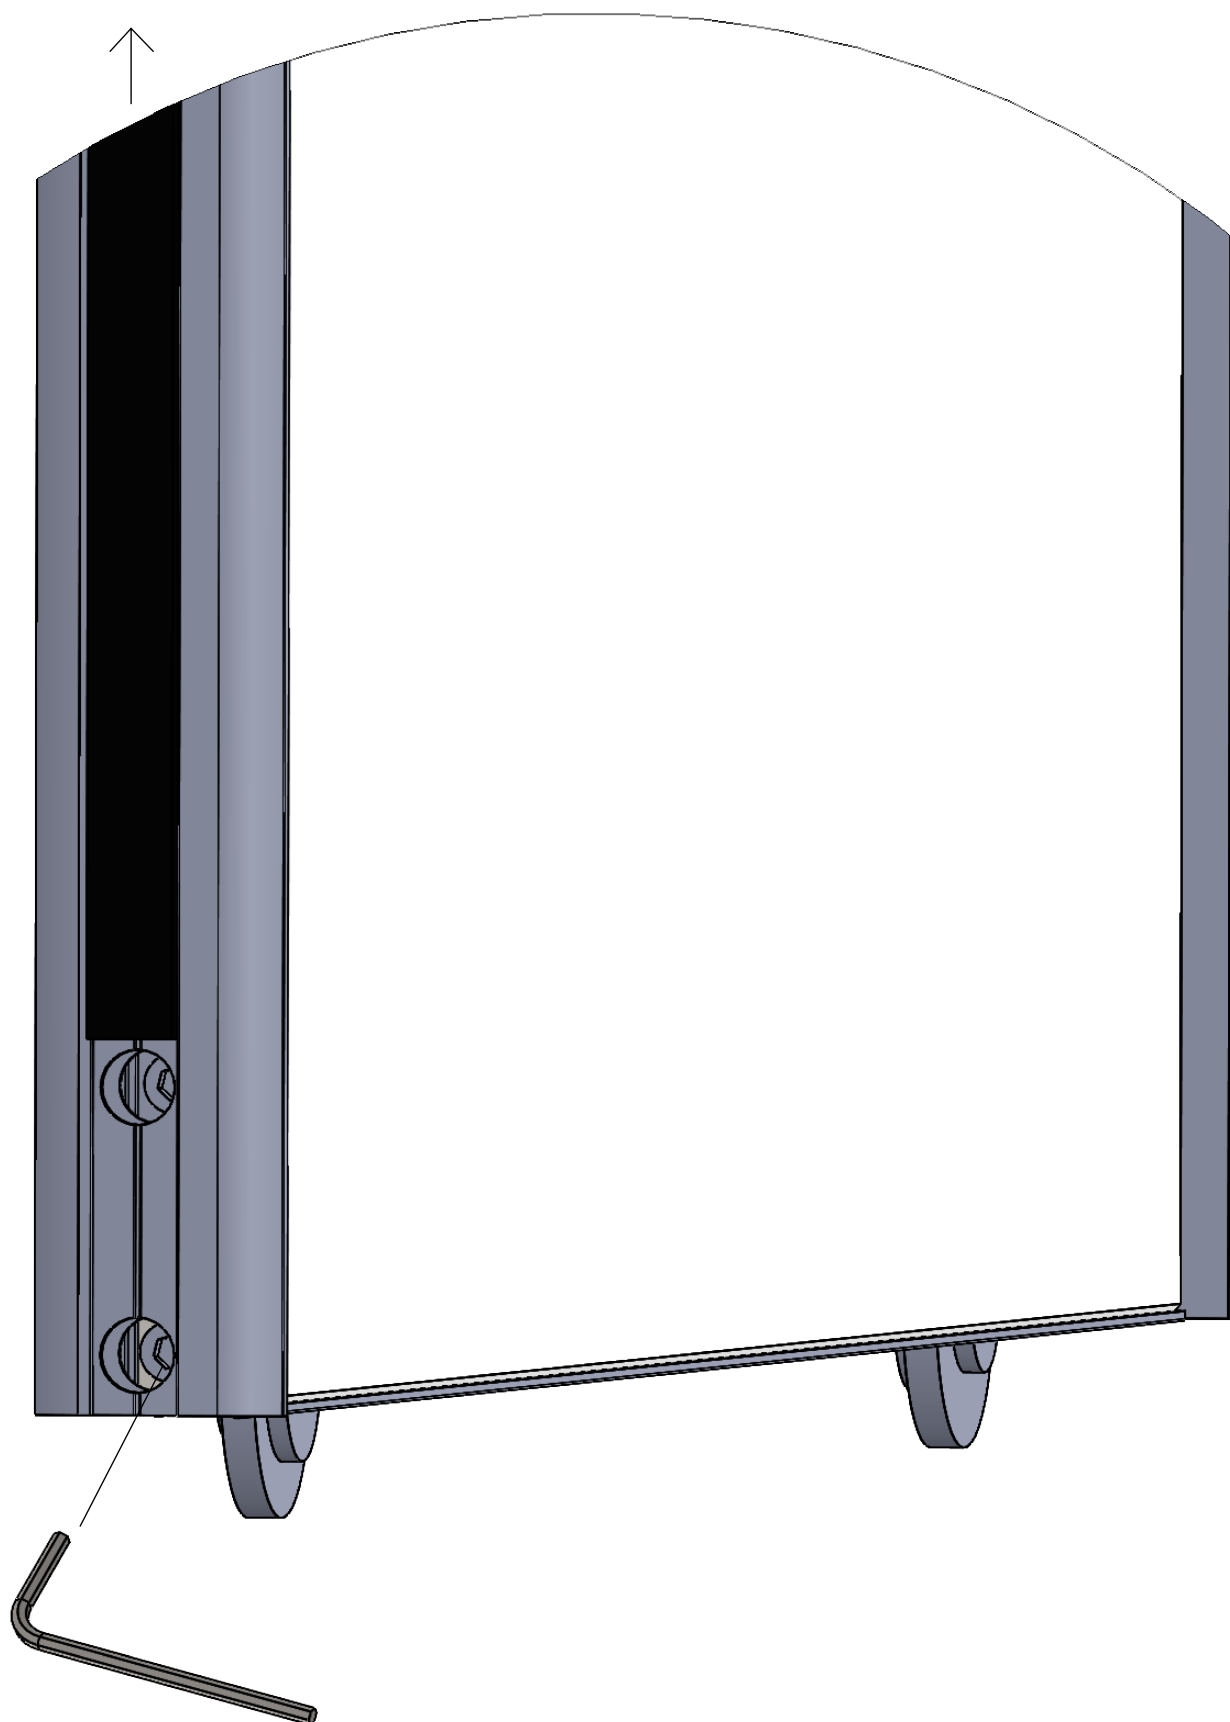


Tracks offset information

for Precision Line frameless systems






v.1

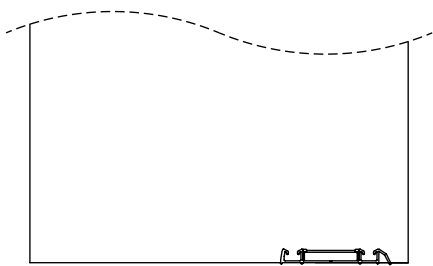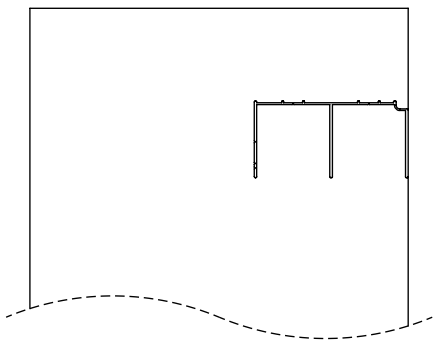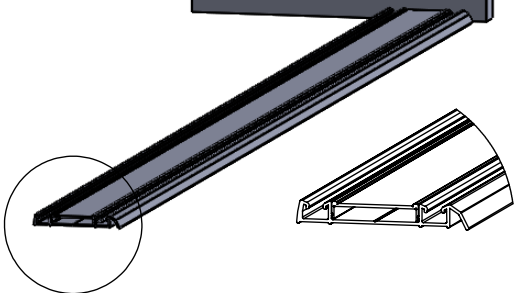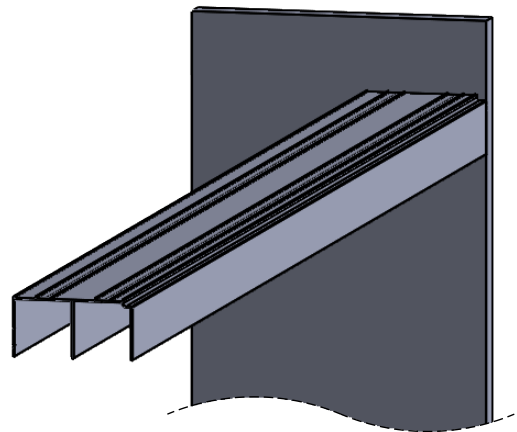

9

v.2

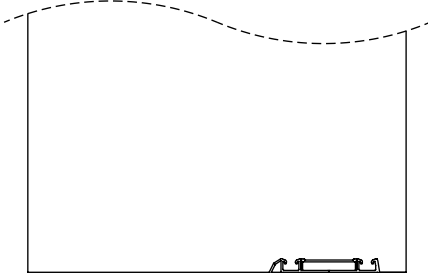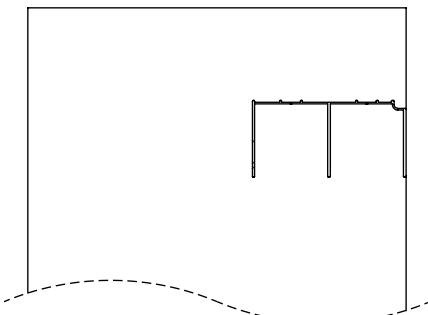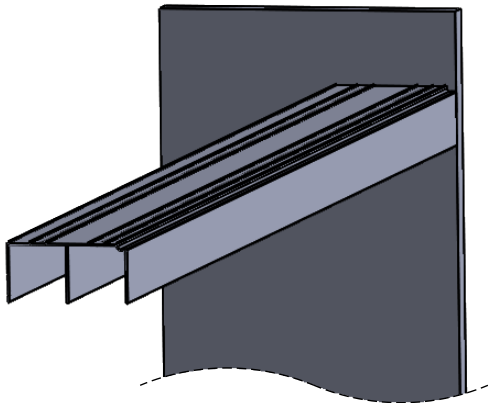

14